Handy Sealer

Compact and Portable

63-285
User's Guide

Thank you for purchasing your handy sealer. Please read this user's guide before using your new handy sealer.

Package contents

- Handy Sealer
- User's Guide
- Quick Start

Features

- Compact and portable design.
- Seals, reseals and opens plastic bags.
- Includes magnet on back for convenient access and storage.
- Use for picnics, camping, at home, and while traveling.

① Install Batteries

Install two AA alkaline batteries.

1. Open the press bar.
2. Lift the battery cover.
3. Insert two AA alkaline batteries (not supplied) matching by the polarity symbols (+ and -) marked inside.

4. Replace the cover and close the press bar.

Battery Notes:

- *Dispose of batteries promptly and properly. Do not burn or bury them.*
- *Use only fresh batteries of the required size and type.*
- *Do not mix old and new batteries, different types of batteries (alkaline, or*

rechargeable), or rechargeable batteries of different capacities.

- *If you do not plan to use the handy sealer for a long time, remove the battery. Batteries can leak chemicals that can damage electronic parts.*
- *Two AA alkaline batteries will last for up to 400 bags (around 60 minutes).*

② Seal Your Plastic / Foil bag

The appliance is ready to use once batteries are installed.

1. Place the plastic or foil bag to be sealed onto the heat pad, positioning the bag either to the left or right of center.

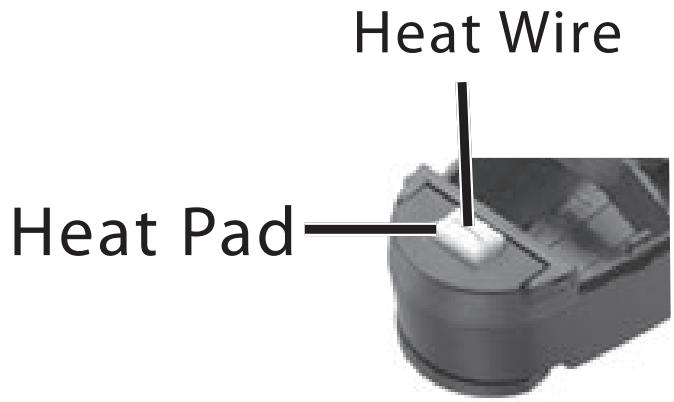

2. Hold the bag in one hand and the sealer in the other. Press the bar down for 3 seconds to preheat the heat wire.

3. Apply light pressure and slide the sealer over the bag to create a sealing line. Be sure to slide from your starting point, then across the edge of the bag.

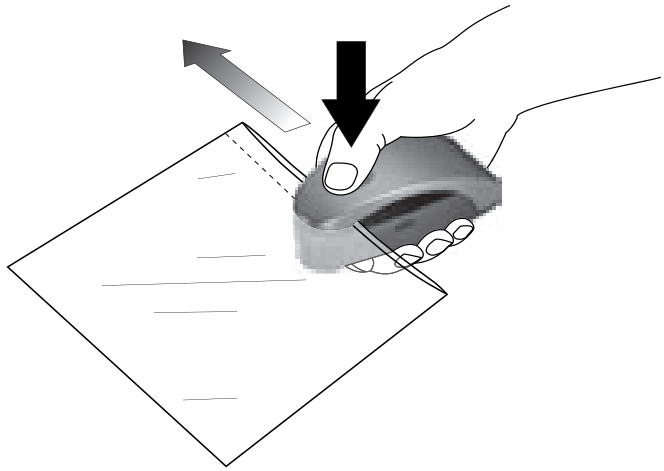

4. Turn the bag over. Seal the open side of the bag by crossing the initial sealing line with a second sealing line across the bag.

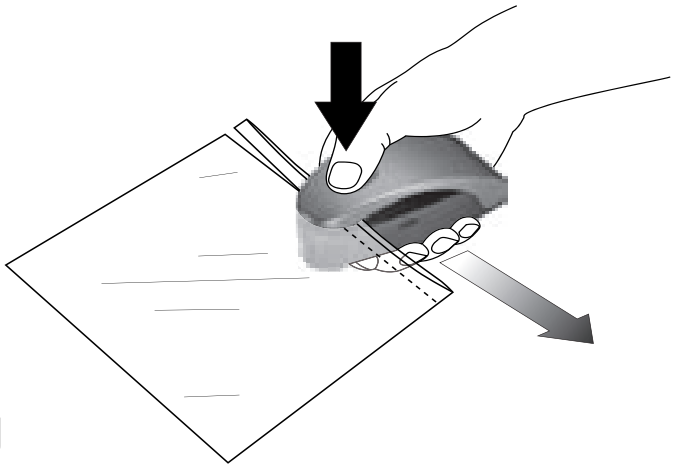

Notes:

- *The handy sealer only needs to be preheated one time per use.*
- *Use light pressure to seal. Press, don't squeeze.*
- *Before you begin, use your handy sealer on an empty bag that is heat sealable. This will help you get a feel for the press. Most plastic and foil bags are heat sealable, but a few are not.*
- *Before sealing, smooth out the top of the bag's edges evenly to eliminate wrinkles. No food, dirt, or oil should be between the inner walls of the bag where the seal is to be made.*
- *During usage, if the sealer melts a hole in the bag being sealed, move more quickly.*
- *Most plastic or foil bags used to store food have a seam running vertically on the backside of the bag from the top to the bottom. Start the seal with the backside of the bag facing you. Seal in the same direction as the seam of the bag to be sealed, not against the seam.*

③ Use the Bag Opener

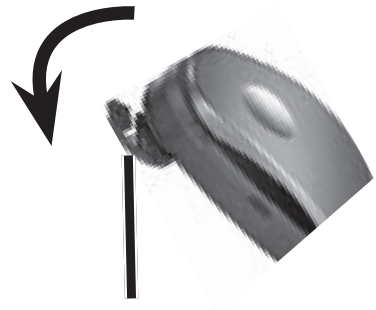
Bag Opener

1. Flip out the bag opener on the bottom of the sealer.
2. Smooth the bag you want to open and insert the edge of the bag into the slot of the bag opener.
3. Slide the bag opener across the bag to open it.

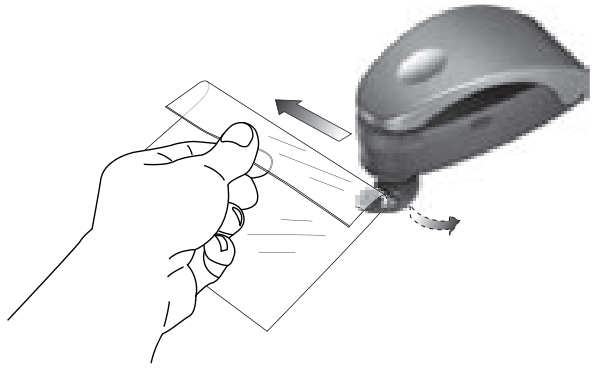

Specifications

Power.....2 AA alkaline batteries (not included)

Dimensions (W x H x D) .....4.2 x 1.8 x 2 in

.....(105 x 45 x 50 mm)

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Important Safeguards

- Read all instructions.
- NEVER TOUCH THE HEAT WIRE OR TOUCH ANOTHER PERSON WITH THE HEAT WIRE. INJURY MAY OCCUR AS A RESULT.

- Pull up the safety bar to cover the heat wire when not in use.
- Close supervision is necessary when any appliance is used by or near children. Keep the handy sealer out of the reach of small children.
- Do not place on or near a hot gas or electric burner, or a heated oven.
- This appliance is for household use only. Do not use this appliance for other than its intended use.
- Never store in a drawer of confined area when batteries are installed in the sealer. If the heat pad is depressed, the unit will turn on and cause a potential fire hazard.

Limited Warranty

Ignition L.P. warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase. IGNITION L.P. MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a Ignition L.P. Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the sales receipt as proof of purchase date to the place of purchase. Ignition L.P. will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of Ignition L.P. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

IGNITION L.P. EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, IGNITION L.P. SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE

PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF IGNITION L.P. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact Ignition L.P. at: Ignition L.P., 3102 Maple Ave Suite 450, Dallas, TX 75201 02/09

For product support, call

1-866-315-0426

Protect the environment by recycling used electronics. Go to E-CyclingCentral.com to find an electronic recycling center near you.

© 2009. Ignition L.P. All rights reserved.

Printed in China 07A09 63-285